

FL200 RANGE


Instructions



COLLINGWOOD
LIGHTING LTD


THIS FITTING MUST BE EARTHED AND INSTALLED BY A QUALIFIED
ELECTRICIAN OR A SUITABLY COMPETENT PERSON.
MAXIMUM AMBIENT TEMPERATURE 35° C

FITTING

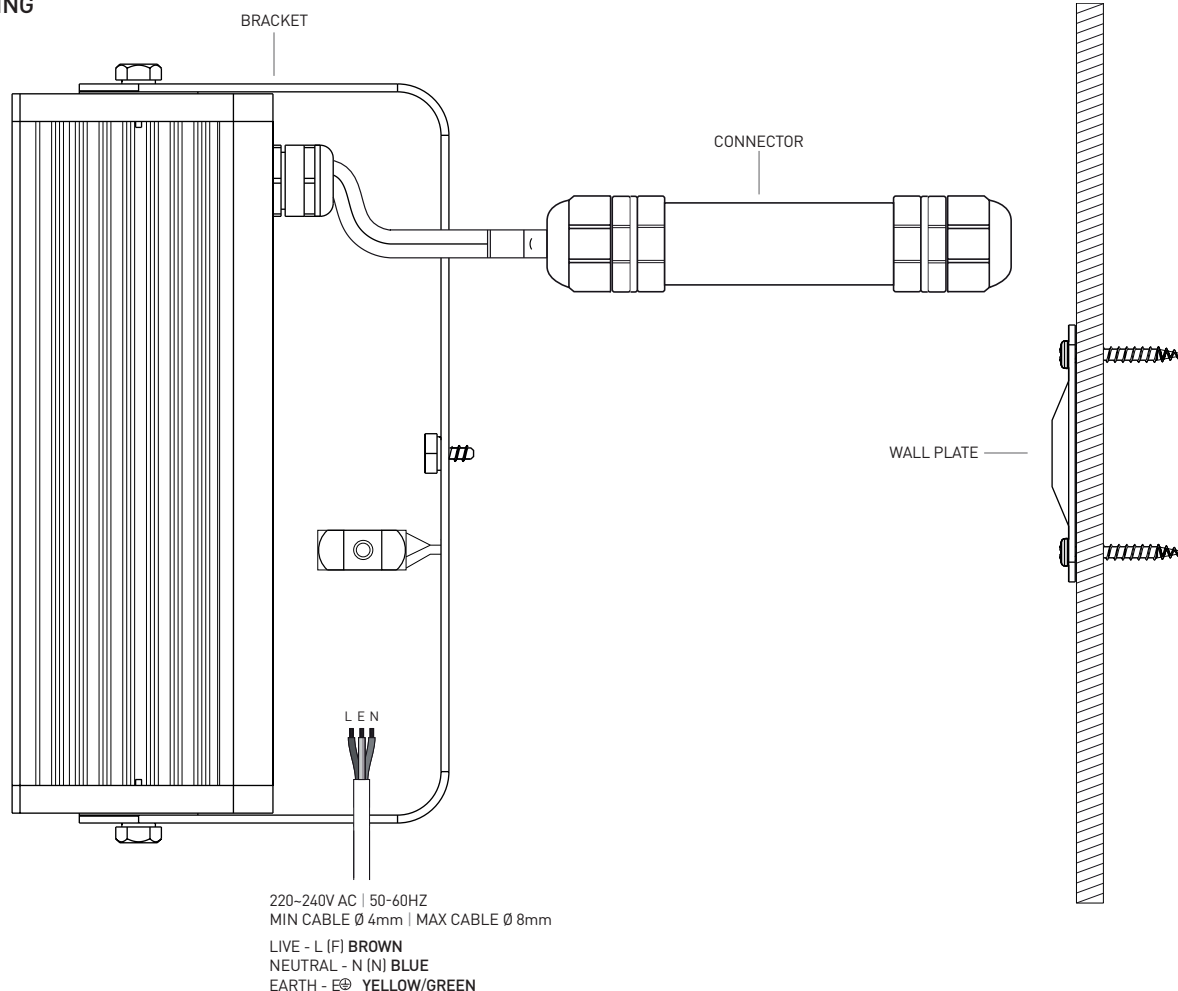

1. Fix the wall plate to the wall. Screws and Rawlplugs are supplied.
2. Remove the connector from the spring clip
3. Fit the FL200 bracket to the wall plate.

WIRING

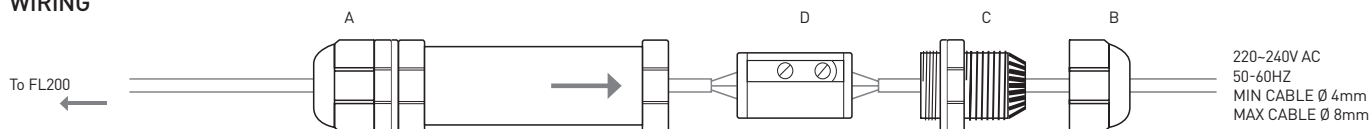

1. Loosen nut A.
2. Remove nut B and cable gland C from the connector body.
3. Push the cable through nut A to slide out connector D from the connector body.
4. Feed nut B and gland C over the mains input cable.
5. Connect mains input live, neutral and earth to the matching terminals of connector D.
6. Pull the cable back through nut A to draw the connector back into the connector body.
7. Firmly tighten nut A.
8. Refit gland C to the connector body and firmly tighten.
9. Refit nut B to gland C and firmly tighten.
10. Refit the connector into the spring clip.